


ДОПОЛНИТЕЛЬНЫЕ ЯЗЫЧКИ


ЗАМКИ

H: Зажим
LH: Высота корпуса
CL: Длина язычка
CH: Высота язычка

КОД ГРУППЫ	050	150	250	072	066	166	366	566	057	055	165
LH	16.5 20 25 30	20	20	29	13.5	13.5	13.5	13.5	13.5	20 32	16
CAM	1-2	1	1	1	3	3	3	3	4	1	3

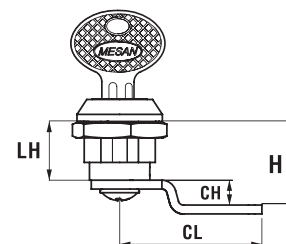


Язычок 1

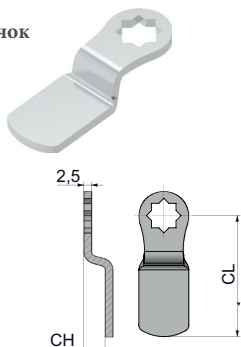


Каталожный номер	CC	CH	CL	LH:16.5 H	LH:20 H	LH:25 H	LH:29 H	LH:30 H	LH:32 H
30403124Y	50	0	43	16.5	20	25	29	30	32
31403010Y	56	0	23	16.5	20	25	29	30	32
31403011Y	30	0	33	16.5	20	25	29	30	32
30403157Y	57	3	48	19.5	23	28	32	33	35
30403125Y	51	7	40	23.5	27	32	36	37	39
30403110Y	52	10	37	26.5	30	35	39	40	42
30403111Y	53	14	33	30.5	34	39	43	44	46

Язычок 2

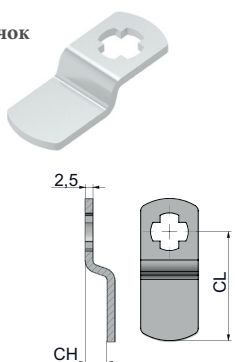


Каталожный номер	CC	CH	CL	LH:16.5 H
30403014Y	10	0	38	16.5
30403100Y	30	0	33	16.5
30403019Y	20	0	49	16.5
30403082Y	11	3	38	19.5
30403015Y	12	7	36	23.5
30403016Y	21	7	47	23.5
30403017Y	22	10	44	26.5
30403022Y	13	0	39	16.5

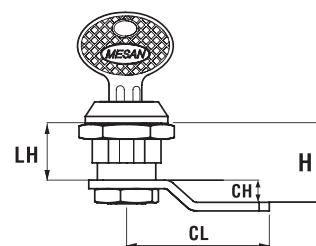


Язычок с крючком (CC: 13)


Язычок 3

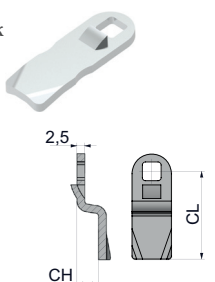


Каталожный номер	CC	CH	CL	LH:13.5 H	LH:16 H
30403084Y	10	0	33	13.5	16
30403184Y	20	0	25	13.5	16
30403183Y	21	6	25	19.5	22
30403085Y	11	7	30	20.5	23
30403196Y	22	-6	25	7.5	10

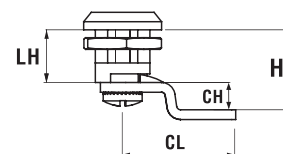

Язычок 4

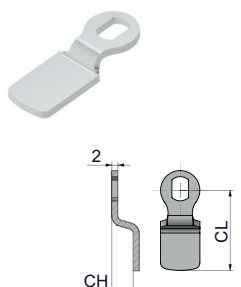

Каталожный номер	CC	CH	CL	LH:13 H
30403158Y	10	0	24	13
31403016Y	50	0	21	13
30403029Y	20	0	31	13
30403028Y	30	0	36	13
30403089Y	21	3	30	16
30403030Y	22	7	26	20
30403182Y	11	-3	28	10
30403058Y	40	0	31	13

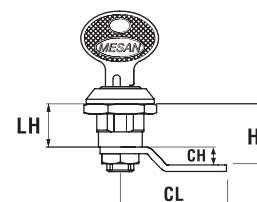

Язычок с крючком (CC: 40)